



K PUSH TECH


INSTALLATION TO BE EMBEDDED INSIDE THE PANEL

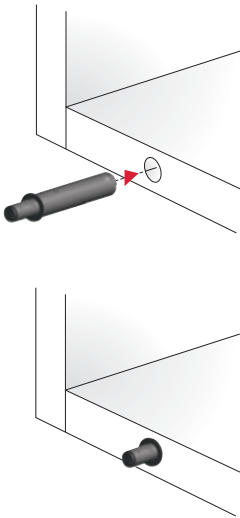


INSTALLATION THROUGH ADAPTER HOUSING

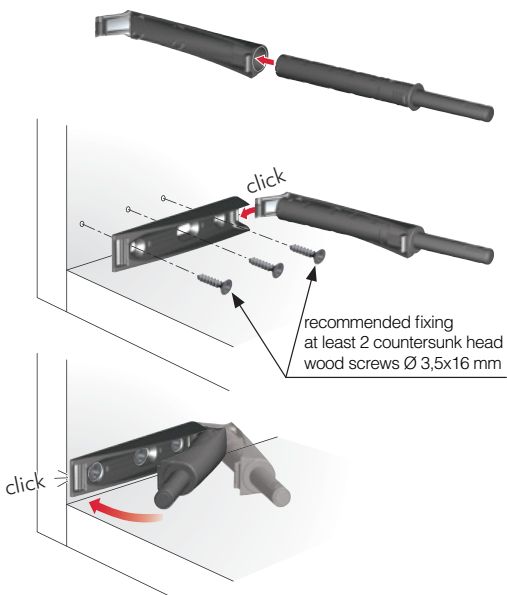


WITH MAGNET
for cabinets using **unsprung hinges**
or **negative hinges**.

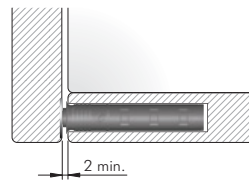


For details refer to
"K PUSH TECH AND
K LOCK DOOR PLATES".

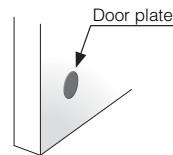


WITH BUFFER
for cabinets using **sprung hinges**.

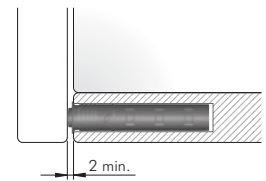


VERSIONS

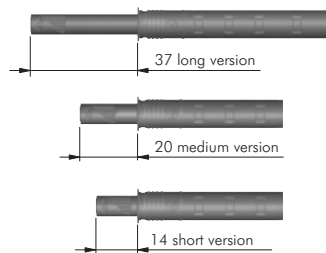


ADJUSTMENTS

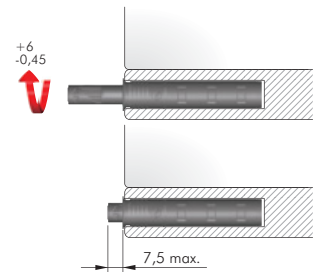


WITH MAGNET
for cabinets using **unsprung hinges**
or **negative hinges**.

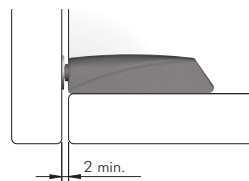


For details refer to
"K PUSH TECH AND
K LOCK DOOR PLATES".

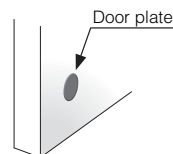

WITH BUFFER
for cabinets using **sprung hinges**.

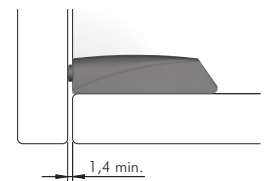

VERSIONS

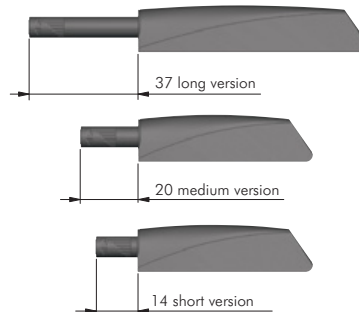

ADJUSTMENTS

